



dislabel printer calibration

- ① note the cross at the upper left of this page
- ② cut off the ruler below or use your own
- ③ measure from the left edge of this page to the vertical part of the cross
- ④ enter the resulting distance in the *Left* field under *Calibration*
In our example image to the right, it's 18.5 mm – yours will probably be different

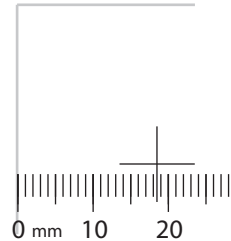

- ⑤ measure from the top edge of this page to the horizontal part of the cross
- ⑥ enter the resulting distance in the *Top* field under *Calibration*
In our example image to the right, it's 21 mm – yours will probably be different

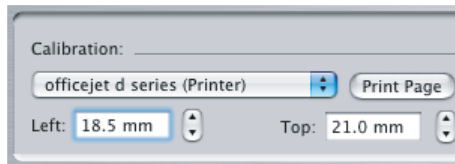